






7-8-13

Lec 4




5) Extreme values of L & C to be avoided


6) Parasitics

can be estimated & absorbed into matching n/w

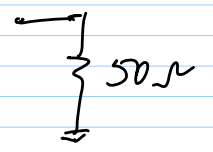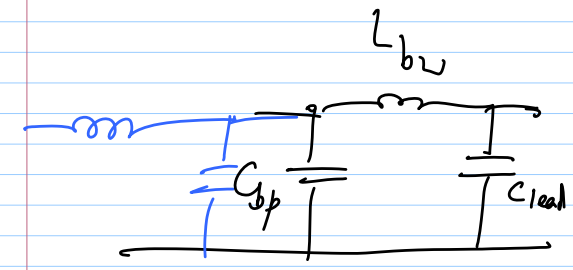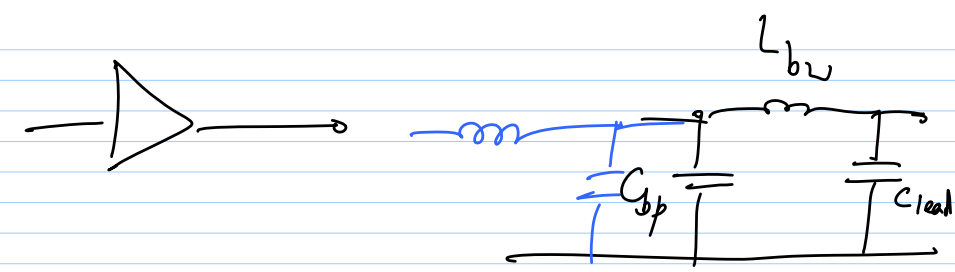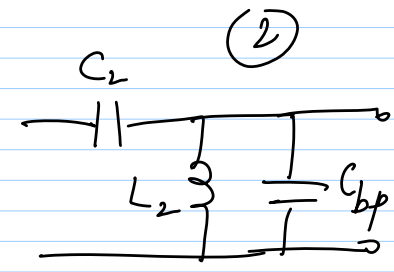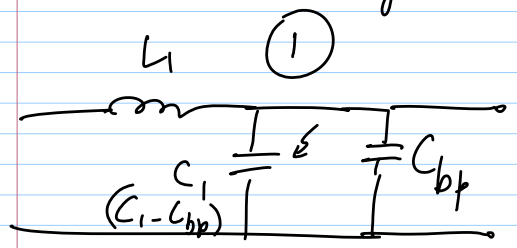

Matching to a complex load

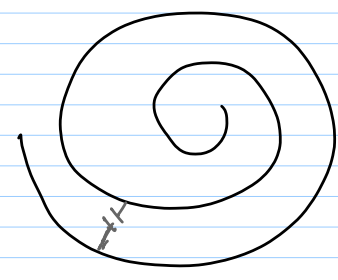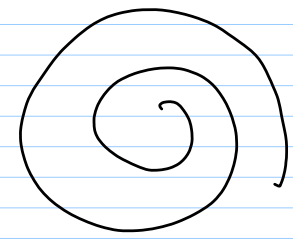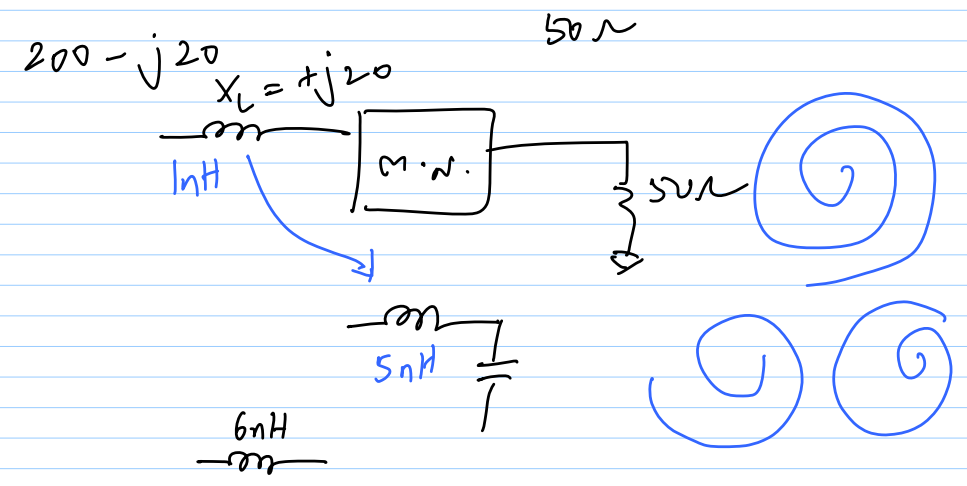

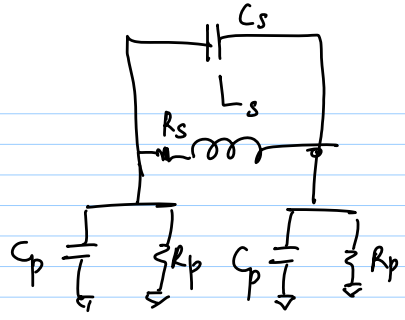

* Can you design a matching n/w with higher Q than ind. Q ?

